



If you have any questions regarding our products, call our toll-free consumer customer service line: **800.643.3522**

Visit our web page: www.thehammocksource.com

Single Cotton Rope Swing

Congratulations on your purchase of the Single Cotton Rope Swing. We believe that you will find it a product of unsurpassed quality and durability.

Swing Units:

 
1- Single Cotton Rope Swing with chain attached

1 - "S" hook

1 - steel hanging bracket

2 - 5/16 x 2" Hex Head lag bolts

Tools needed to assemble your Single Swing

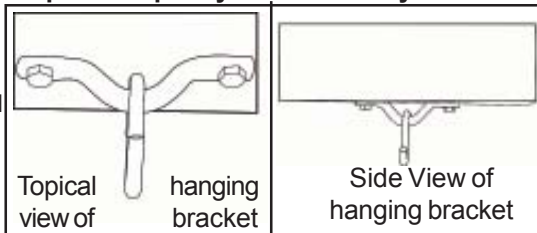

Hanging System: 1/4" Drill and 1/2" wrench or socket.

ASSEMBLY INSTRUCTIONS:

1. Select a location for your swing that is 6 1/2 feet to 8 1/2 feet above ground or floor level and will support 350 lbs. Beam should not be a soft wood that will not support rigors of swinging. Position hanging system bracket along the center line of the beam on which you wish to hang your swing. Make sure beam has no knots or cracks or rot.

CAUTION:

A. Mounting Hardware included is safety rated ONLY for load bearing structures. The steel hanging bracket is not safety tested and approved for concrete surfaces, steel or plastic construction, particle board and the like material, or vinyl siding.

B. The steel hanging bracket is to make contact with mounting surface. Structural support unit must accommodate maximum safe weight limit of 350 pounds.

C. Prior to each use of your swing, inspect the ropes and other materials in your swing including but not limited to: the mounting hardware, installation points, and objects supporting your swing for signs of weakness or wear. Do not use if there are any signs that the material or supports are not in proper condition.

 
IF YOU HAVE ANY QUESTIONS CONCERNING INSTALLATION, PLEASE CONSULT A BUILDING EXPERT. THE HAMMOCK SOURCE IS NOT RESPONSIBLE FOR IMPROPER INSTALLATION.

2. Mark drill holes on center line with a pencil where the bolt holes are located on the bracket and expose bare wood.


3. Drill holes where indicated by marked spots with a 1/4" drill, approximately 2" deep.

4. Position bracket with bracket holes over drill holes and install bolts by hand. Tighten with wrench or socket. Do not over tighten bolts. Bolts will strip the wood, thus causing a reduction in load capacity.

5. Affix "S" hook to hanging bracket. Hook the chain on the swing to the bottom of "S" hook. Adjust the height of the swing with the chain for maximum comfort. When sitting in the swing, your feet should touch the ground with knees slightly bent. Note: The first time you hang the swing, it may seem too high off the ground, however; the ropes will stretch, bringing the swing to a more comfortable level. Simply adjust the chain to put your swing at the desired height.

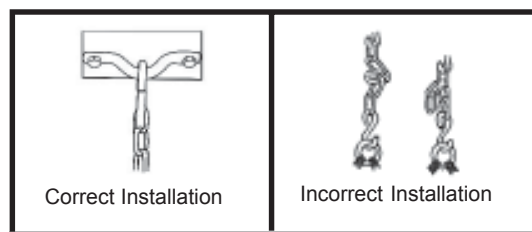

 The design of this swing provides ample room for "push-out" seating. After seated in the swing, the user can place his or her feet at the edge of the swing front and "push-out." The roomy design of the front of the swing will provide a comfortable rest for the legs.

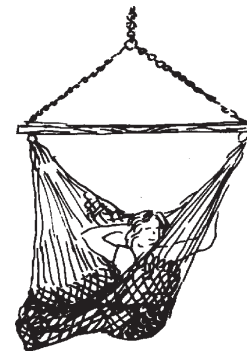

WARNING:

- Not recommended for use by children without adult supervision.

- Be sure the construction from which you are hanging your swing is of good condition, sturdy, and large enough to support maximum safe weight.

CARE AND MAINTENANCE:

Thank you for purchasing the Single Cotton Rope Swing. The proper care and cleaning of your swing will help preserve and maintain its natural beauty, as well as ensure years of use. A solution of mild soap and water will remove most dirt and is not harmful to the natural cotton fibers. For stains spot clean and rinse thoroughly.

WARRANTY INFORMATION:

Products of The Hammock Source are guaranteed to be free of defects in workmanship and materials for up to one year after the purchase date. Prolonged exposure to weather conditions including snow, rain, and humidity are not covered under the warranty nor is damage caused by normal wear, mildew, or improper care including storage, maintenance, and installation. If an item is found to be defective within one year of its purchase, it will be replaced without charge upon the return of the unit accompanied by a sales receipt. If you choose to return an item, you must contact our customer service department at 800.643.3522 to obtain a Return Authorization Number that will allow us to track your unit once it arrives at our warehouse; thereby creating a faster response to your concern.