

Single Layer Hammock

Congratulations on your purchase of the Single Layer Hammock. We believe that you will find it a product of unsurpassed quality and durability. If you have any questions regarding our products, call our toll-free consumer customer service line: **800.643.3522** Visit our web page: www.thehammocksource.com

MAXIMUM SAFE WEIGHT LIMIT OF HAMMOCK: 450 LBS

Included with your hammock will be: 2 – hammock hooks for use in post or tree installation

Installation of Hammock

1. The space in which you plan to hang your hammock should be 18 to 24 inches greater than the overall length of your hammock. If you have any questions, please call us for assistance. **In any event, always test your hammock carefully prior to each use to make certain that it s hung securely and in safe condition.**

a. Make certain the tree is at least 6 inches (15 cm) in diameter (posts should be at least 4' x 4') and that the wood is a hardy species such as oak or hickory. Woods such as willow, palm, or beech are very soft and may not hold the hammock when in use. If installing the hammock into any surface other than wood, consult a professional for the proper method and the additional supplies needed for a safe installation.

b. To install the hammock hooks that accompany your hammock, first drill a 1/8"-3/16" pilot hole. (Pilot hole should be as small as possible in order to ensure safe assembly and use of hammock.) Screw in the hammock hook one turn past the point that the last thread was covered. **Do not over twist the hammock hook. This may cause damage to the metal and weaken the support.**

c. Hook the free ends of the chains on each side of your hammock over your newly installed hammock hooks, using the chain links to adjust height and tautness (FIGURE A). Once the hammock ropes have fully stretched, you may want to tweak your hammock height by further adjusting chain lengths.



Figure A

Care & Maintenance:

Care and maintenance is easy. The fabric can be cleaned with water, a mild detergent, and a soft brush or cloth. Take care to protect wood parts, if possible. When you are through gently washing your hammock, rinse it thoroughly and allow it to air dry completely before using or storing.

CAUTION:

-ALWAYS PLACE YOUR WEIGHT IN THE CENTER OF THE HAMMOCK. DO NOT SIT ON THE EDGE.

- ----DO NOT ALLOW CHILDREN TO USE THE HAMMOCK WITHOUT DIRECT ADULT SUPERVISION.
- —DON'T ALLOW YOUR CHILDREN (OR YOURSELF, FOR THAT MATTER) TO JUMP UP AND DOWN IN THE HAMMOCK OR USE IT LIKE A PLAYGROUND SWING. NOT ONLY IS THIS EXTREMELY DANGEROUS, BUT IT PUTS EXCESSIVE WEAR AND TEAR ON THE HAMMOCK AND ITS HANGING HARDWARE.

—DON'T LET THE CHAIN GET TWISTED AND DON'T FLIP THE HAMMOCK OVER WHILE IT'S HUNG; BOTH

SEVERELY COMPROMISE CHAIN STRENGTH.

OUR WARRANTY: All Hammock Source products are guaranteed free of defects in workmanship and materials for up to one year from the date of purchase. If an item is found to be defective within that time, we will replace it at no charge to you. Normal wear and tear, including prolonged exposure to snow, rain and heavy humidity, is not covered, nor is mold, mildew or damage from improper storage, maintenance or installation. An original sales receipt must accompany any returned product, along with a Return Authorization Number that someone in our customer-service department will be happy to provide; call toll free at (800) 334-1078.