
DINING CHAIR W/ARMS



Tip: When using a barrel bolt with a barrel nut, place the bolt into the barrel nut and gently turn it counter clockwise until you feel a slight click. Then proceed to turn the bolt clockwise to tighten the barrel nut onto the barrel bolt.

HARDWARE PACK

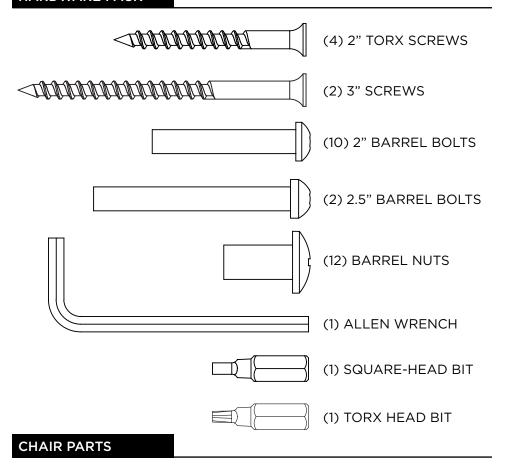


- CHAIR BACK
- CHAIR SEAT
- LEFT LEG ASSEMBLY
- RIGHT LEG ASSEMBLY
- NAMEPLATE
- LOWER FRAME

SUGGESTED TOOLS


- RUBBER MALLET
- PHILLIPS HEAD SCREWDRIVER
- DRILL

STEP 1. Attach chair seat to left and right front legs using (4) barrel bolts and barrel nuts.


Note: Name plate hidden to show assembly.

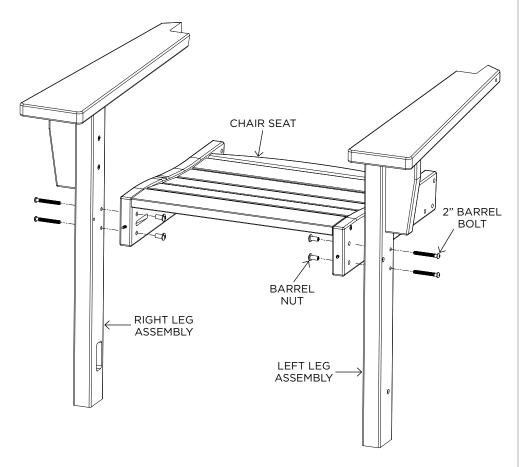

STEP 2. Use (2) 3" screws to attach name plate to chair front legs.

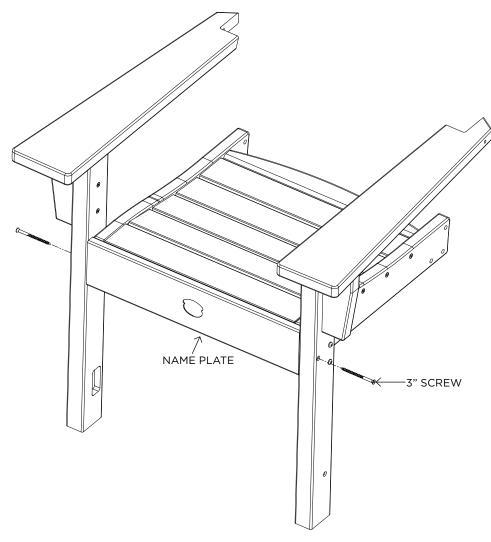


 
STEP 3. Use (6) 2" bolts and barrel nuts to attach chair back to chair seat.




The screws on the front of the lower frame should be offset towards the top side.

STEP 5. Use (2) 2.5" barrel bolts and barrel nuts to attach chair arms to chair back.

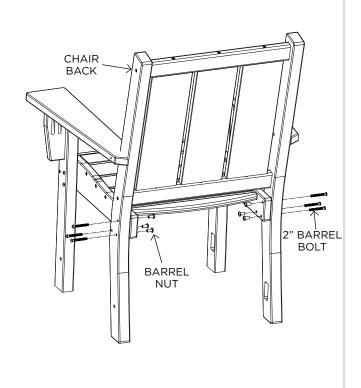

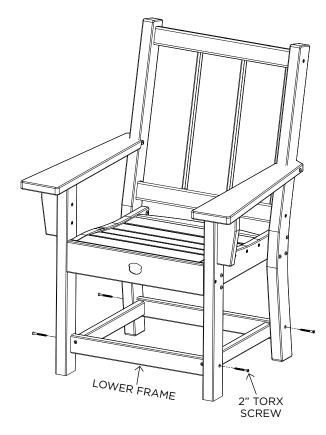

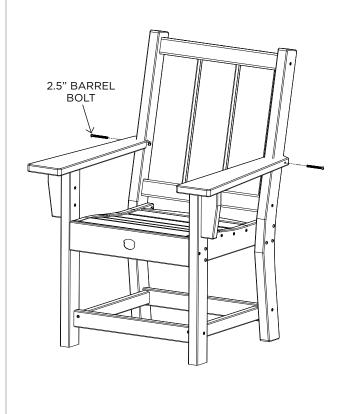

Congratulations on purchasing this Dining Chair w/Arms. QUESTIONS REGARDING THIS PRODUCT? Call our customer service team, 252-758-0641.

RESIDENTIAL WARRANTY - This quality product includes a LIMITED LIFETIME WARRANTY for RESIDENTIAL CUSTOMERS. In the unlikely event any splintering, rotting, cracking, peeling, or chipping should ever occur, The Hammock Source will supply replacement parts or replace the furniture, at no charge to you. This does not include negligence, improper use, animal damage or damage caused by natural disasters. When using around fire, keep furniture at a minimum distance of 30 inches from the heat source. Prevent prolonged exposure to chlorinated water. Note that an original sales receipt must accompany any returned product, along with a Return Authorization Number from Hammock Source customer service; call at 252-758-0641.

CONTRACTOR WARRANTY - CONTRACTORS receive a LIMITED 7-YEAR WARRANTY. Follow the same steps outlined above.

