

Congratulations on purchasing this Durawood Porch Rocker! You're going to love the quality, durability and simple assembly — plus the full Residential Lifetime Warranty. **QUESTIONS ABOUT THIS PRODUCT?** Call our customer service team, (800) 643-3522.



STEP 1. Place the seat on its side, left side up and attach left arm using screws as shown. Higher end of seat base is the front of the chair. (FIGURE 1)

STEP 2. Attach spreader bars with screws as shown. (FIGURE 2) Note: The shorter spreader is used at back of the chair.

STEP 3. Next, attach seat back and secure with screws at the top and bottom as shown (FIGURE 3)



**RESIDENTIAL WARRANTY** | This quality product includes a **FULL LIFETIME WARRANTY** for **RESIDENTIAL CUSTOMERS**. In the unlikely event any splintering, rotting, cracking, peeling, chipping, insect infestation or other damage should ever occur, The Hammock Source will replace this furniture, at no charge to you. Note that an original sales receipt must accompany any returned product, along with a Return Authorization Number from Hammock Source customer service; call toll-free at (800) 643-3522.

**CONTRACTOR WARRANTY** | **CONTRACTORS** receive a **FULL 7-YEAR WARRANTY**. Follow the same steps outlined above.