


# DEEP SEATING SWING INSTRUCTIONS

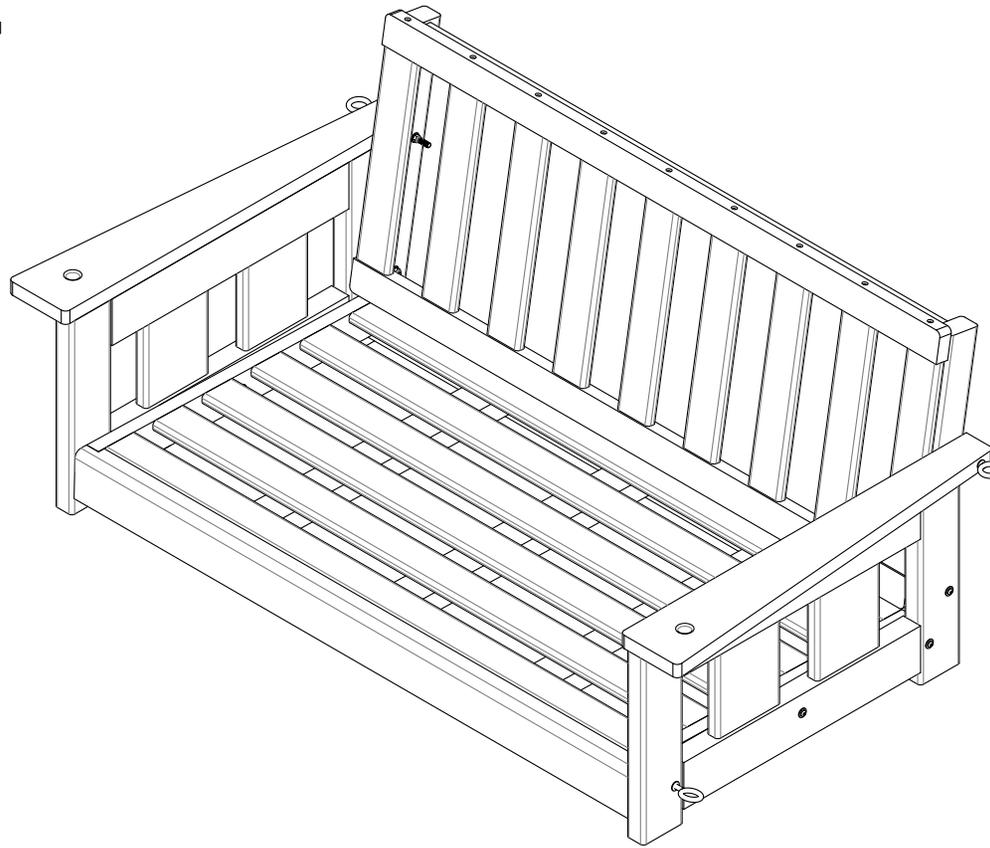


## COMPONENTS

- Left Arm Assembly
- Right Arm Assembly
- Seat Assembly
- Back Assembly
- Chain Assembly
- Hardware Pack

## HARDWARE PACK

- (4) 2" Barrel Bolts
- (2) 2.5" Barrel Bolts
- (6) Barrel Nuts
- (1) Allen Wrench
- Chain Assembly
- Chain Sets: (2) Eye Bolts, nuts, and washers attached
- Tree Hooks (2)

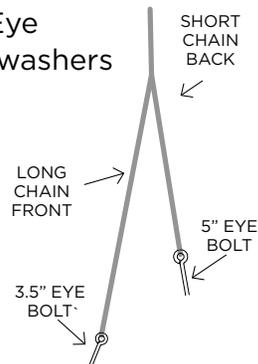

**Note:** Chains come attached to arms.


## SUGGESTED TOOLS

- RUBBER MALLET
- PHILLIPS HEAD SCREW DRIVER
- DRILL
- SOCKET WRENCH
- 1/2" x 1/4" DEEP SOCKET


**Tip:** When using a barrel bolt with a barrel nut, place the bolt into the barrel nut and gently turn it counter clockwise until you feel a slight click. Then proceed to turn the bolt clockwise to tighten the barrel nut onto the barrel bolt.

## ASSEMBLY


**STEP 1a.** Using (2) 2" Bolts and (2) Barrel Nuts attach the Left Arm Assembly to the Seat Base. Repeat with the Right Arm Assembly. **Keep Hardware loose until Step 1b.**

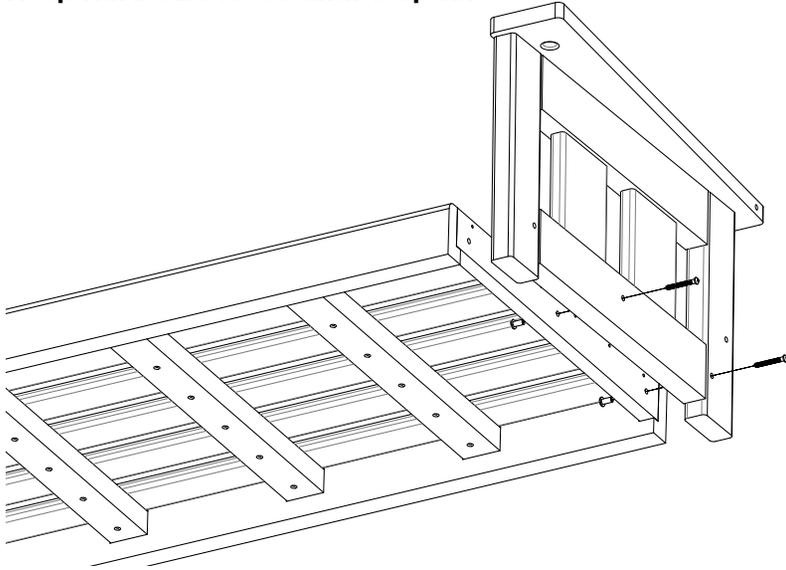


**STEP 1b.** After both Arm Assemblies are attached use the eye bolts connected to a chain running through the arm to tighten the arm assemblies to the seat base. **Tighten the hardware.**

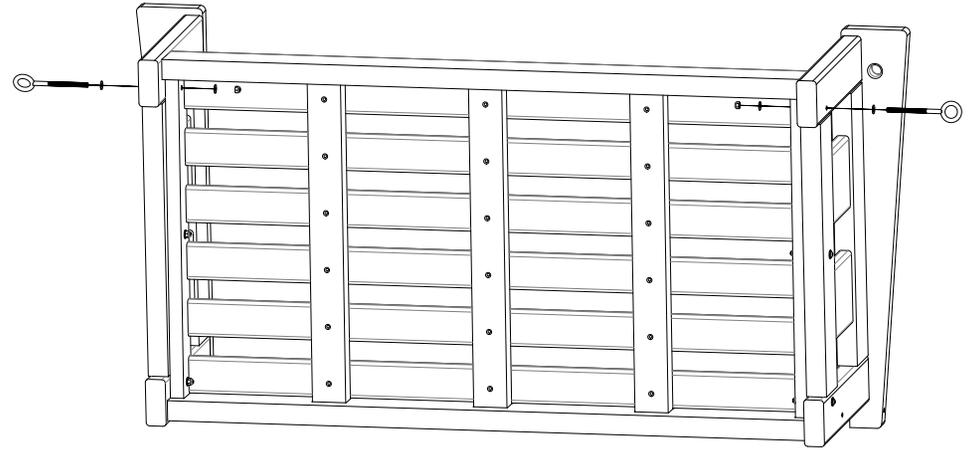

**STEP 2a.** Position the Back Assembly, use remaining eye bolts to connect the Back Assembly to the arms of the swing.

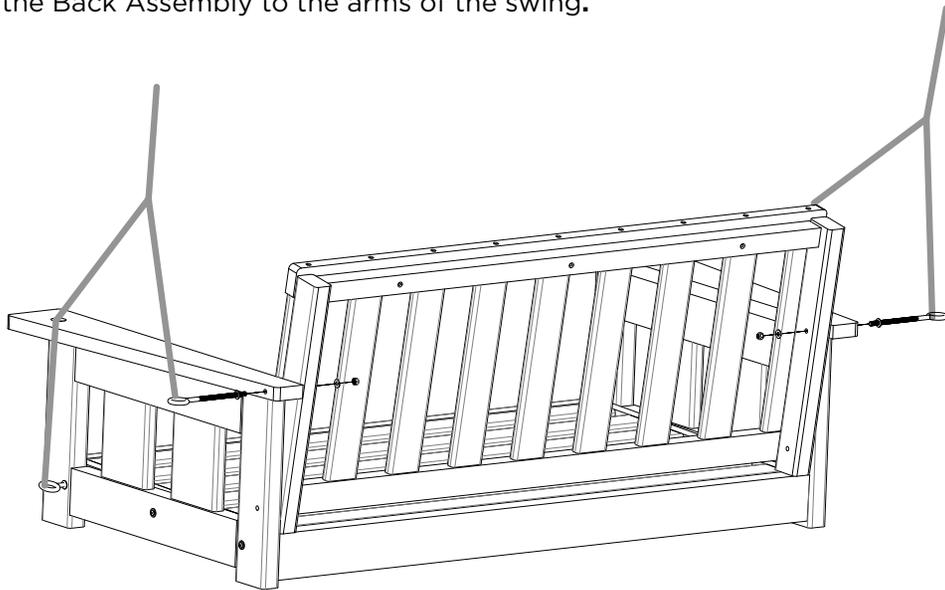


**STEP 2b.** Use (2) 2.5" Barrel Bolts to connect the bottom of the Back Assembly to the Arm Assemblies, tighten all bolts and nuts.

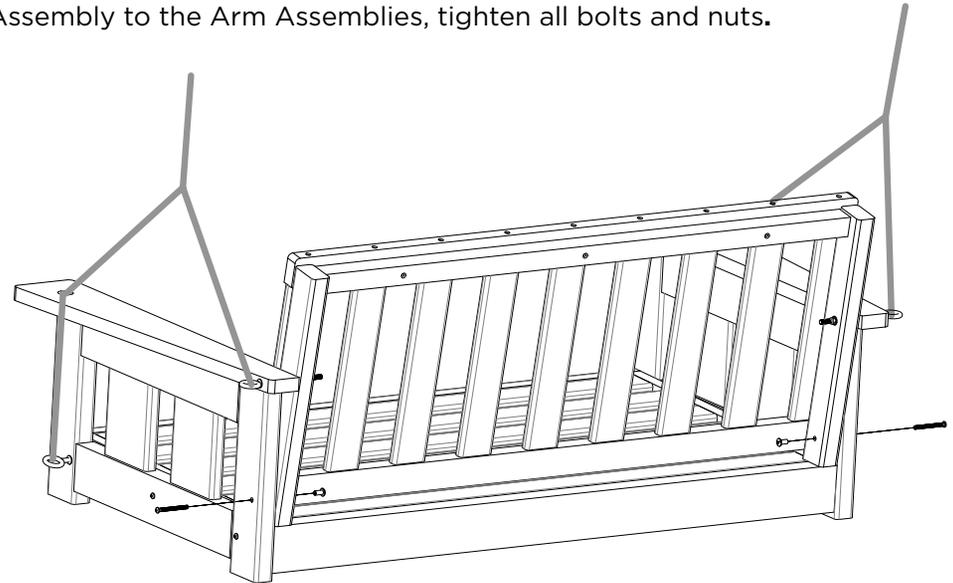

**Note:** Chain displayed upright for visibility, do not hang chain from ceiling mount until installation is complete.

**STEP 3.** Finished product. Hang chain from ceiling mounts.

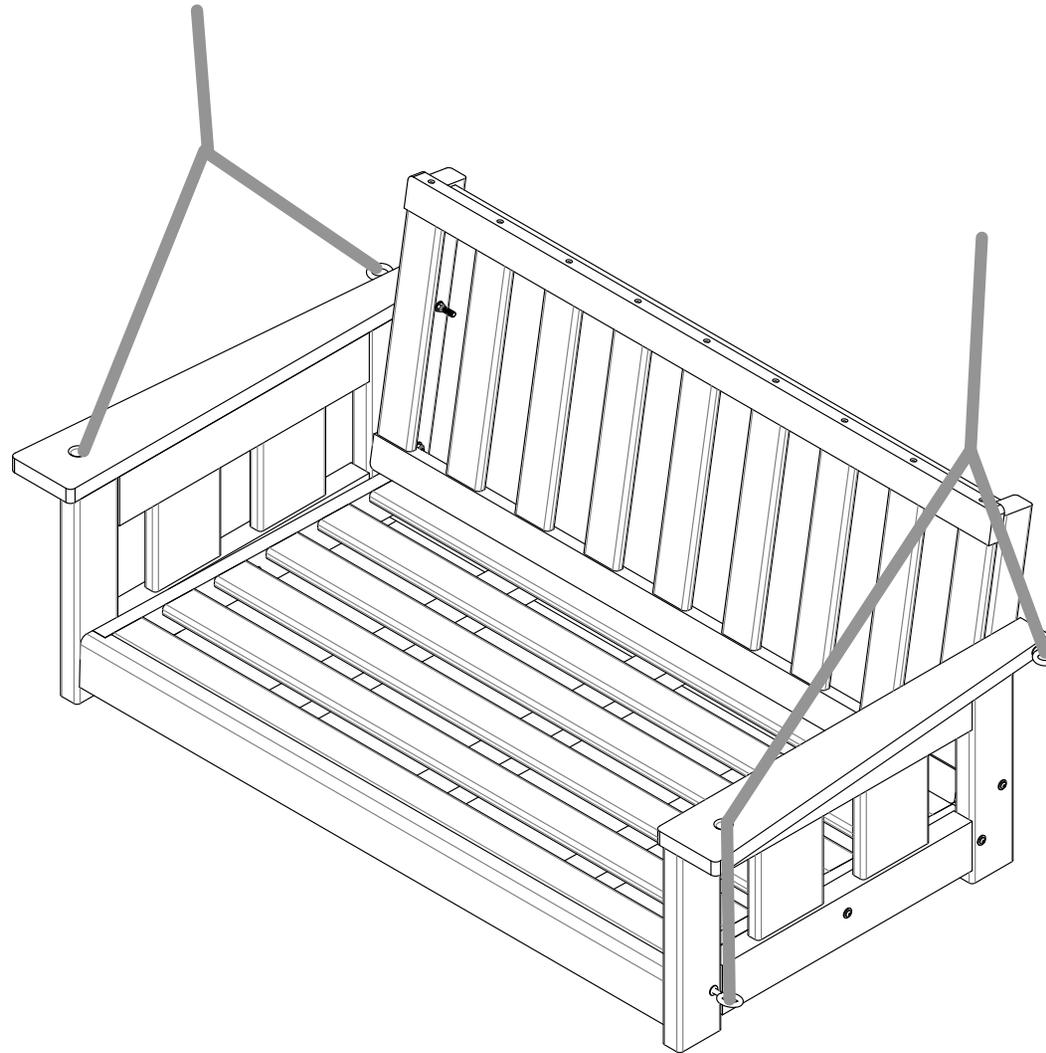

**Congratulations on purchasing this Deep Seating Swing. QUESTIONS REGARDING THIS PRODUCT? Call our customer service team, 252-758-0641.**

**RESIDENTIAL WARRANTY** - This quality product includes a LIMITED LIFETIME WARRANTY for RESIDENTIAL CUSTOMERS. In the unlikely event any splintering, rotting, cracking, peeling, or chipping should ever occur, The Hammock Source will supply replacement parts or replace the furniture, at no charge to you. This does not include negligence, improper use, animal damage or damage caused by natural disasters. When using around fire, keep furniture at a minimum distance of 30 inches from the heat source. Prevent prolonged exposure to chlorinated water. Note that an original sales receipt must accompany any returned product, along with a Return Authorization Number from Hammock Source customer service; call at 252-758-0641.

**CONTRACTOR WARRANTY** - CONTRACTORS receive a LIMITED 7-YEAR WARRANTY. Follow the same steps outlined above.

**MAINTENANCE** - Thoroughly inspect product before each use. Periodically check bolts after assembly and re-tighten when necessary.

