



72" PICNIC TABLE INSTRUCTIONS

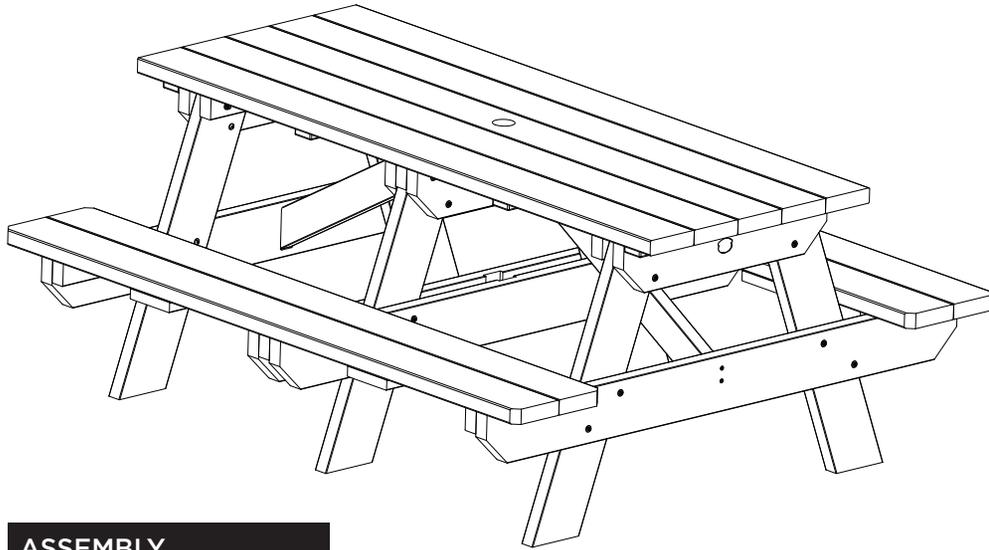


ASSEMBLY


STEP 1. Flip table top over, align the center leg assembly with the locating blocks in the center. Using (2) 5" hex bolts insert the bolt through a washer, through the material as shown then secure using (1) washer and (1) lock nut on each bolt. **Tighten all bolts.**

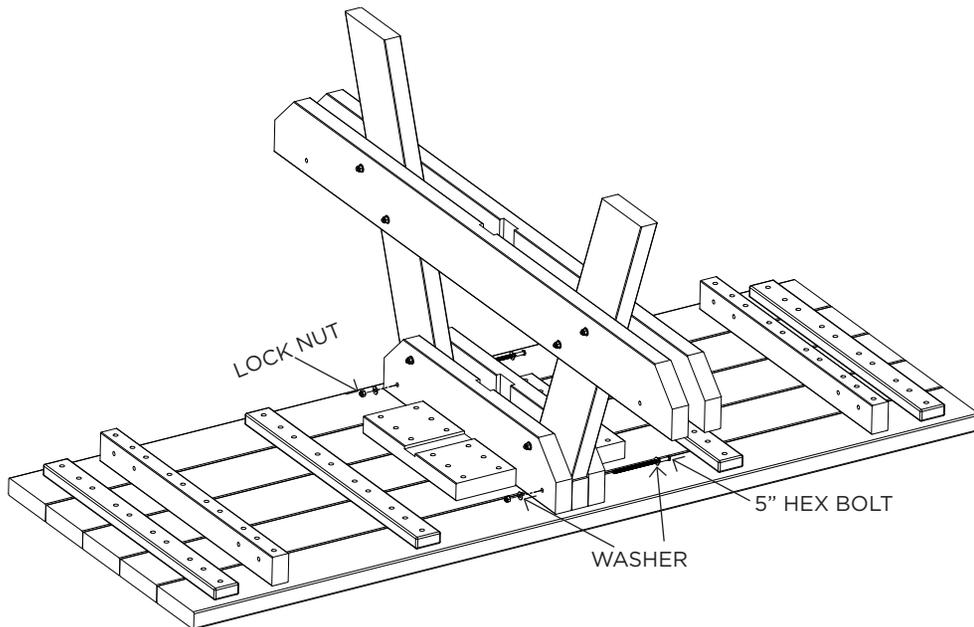

HARDWARE PACK



(4) 3" TORX SCREWS




(4) 2" TORX SCREWS




(12) 5" HEX BOLTS




(4) 3.5" HEX BOLTS



(32) WASHERS



(16) LOCK NUTS



(1) EXTENDED TORX HEAD BIT

TABLE PARTS


- (1) TABLE TOP
- (1) CENTER LEG ASSEMBLY
- (2) OUTER LEG ASSEMBLIES
- (2) SEAT ASSEMBLIES
- (2) ANGLED BRACES

SUGGESTED TOOLS

- SOCKET WRENCH
- 7/16" x 1/4" DEEP SOCKET
- DRILL


ASSEMBLY

STEP 2. Align (1) outer leg assembly between the locating beams as shown, make sure they are oriented correctly. Using (4) 5" hex bolts insert the bolt through a washer, through the material as shown then secure using (1) washer and (1) lock nut on each bolt. Repeat for the second leg assembly. **Tighten all bolts.**

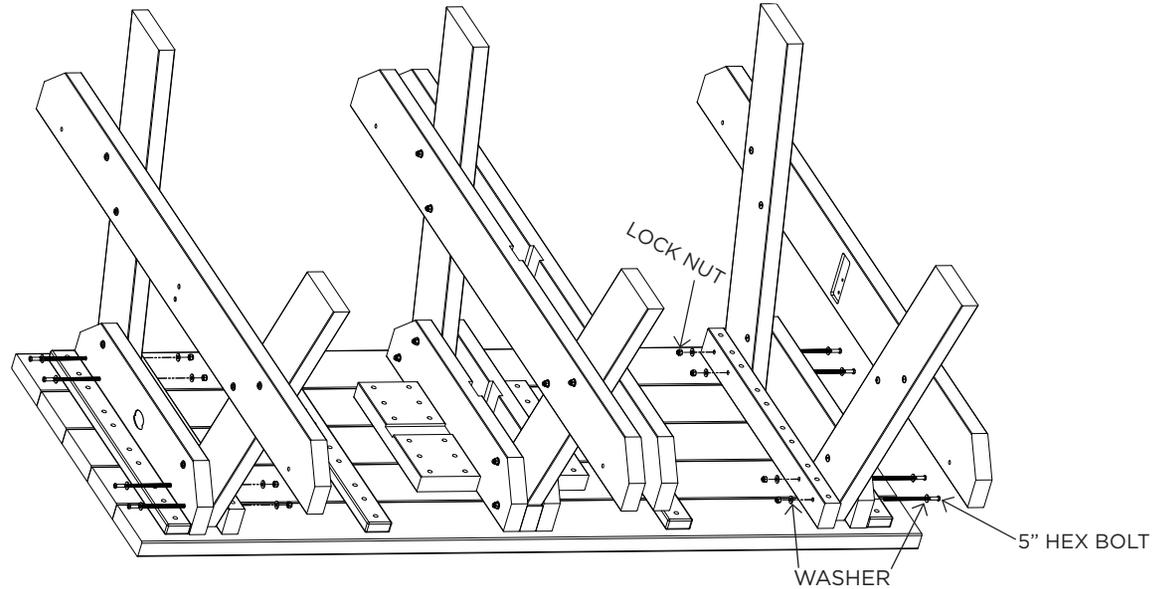

STEP 3. Using (1) angled brace at a time, slip the brace into the locating pockets of the outer leg assemblies as shown with the opposite end of the brace in the slot of the table top support. Use (2) 2" torx screws in the counterbored holes to fasten the brace to the table top support, then use (2) 3" torx screws to fasten the brace to the outer leg assembly. Repeat for the second brace.


Ensure all screws and bolts are fastened tightly.

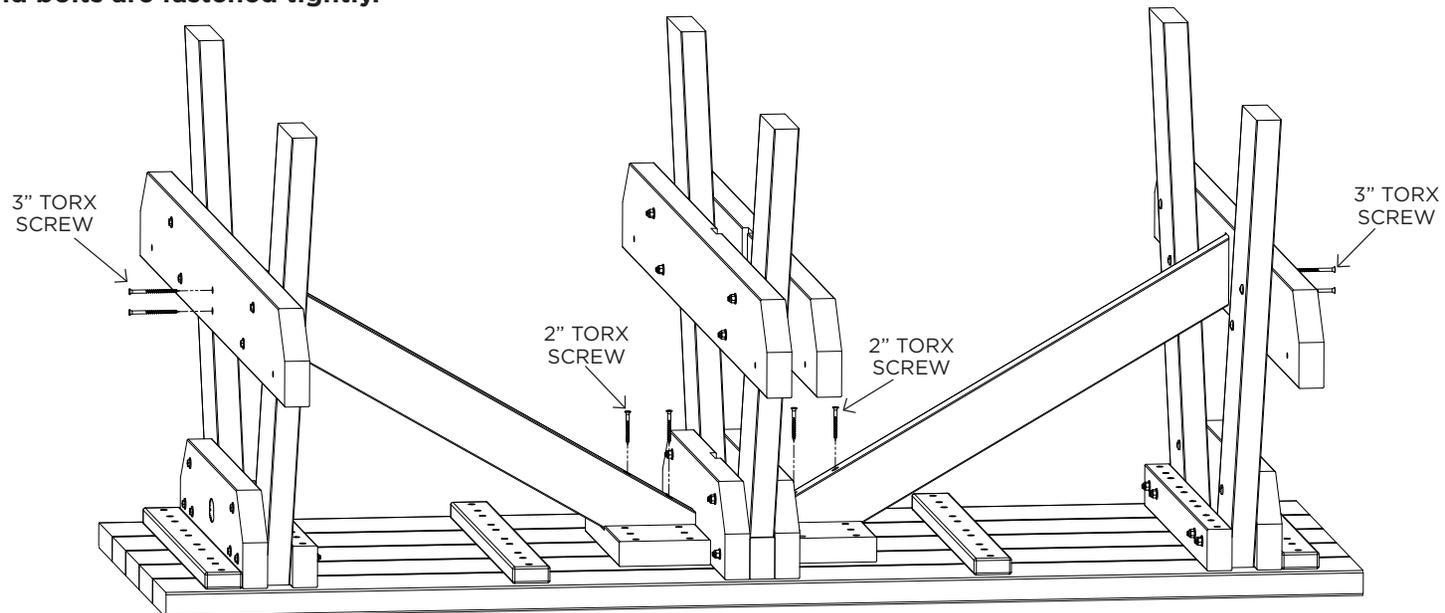

ASSEMBLY

STEP 4. Flip the table upright, it is recommended you have 2-3 people for this. Once the table is flipped take a seat assembly and position it as shown. Align the bolt holes then using (4) 3.5" hex bolts, (2) 5" hex bolts, (12) washers, and (6) lock nuts fasten the seats as shown using the same order of bolt/washer/lumber/washer/bolt.

Tighten all bolts.

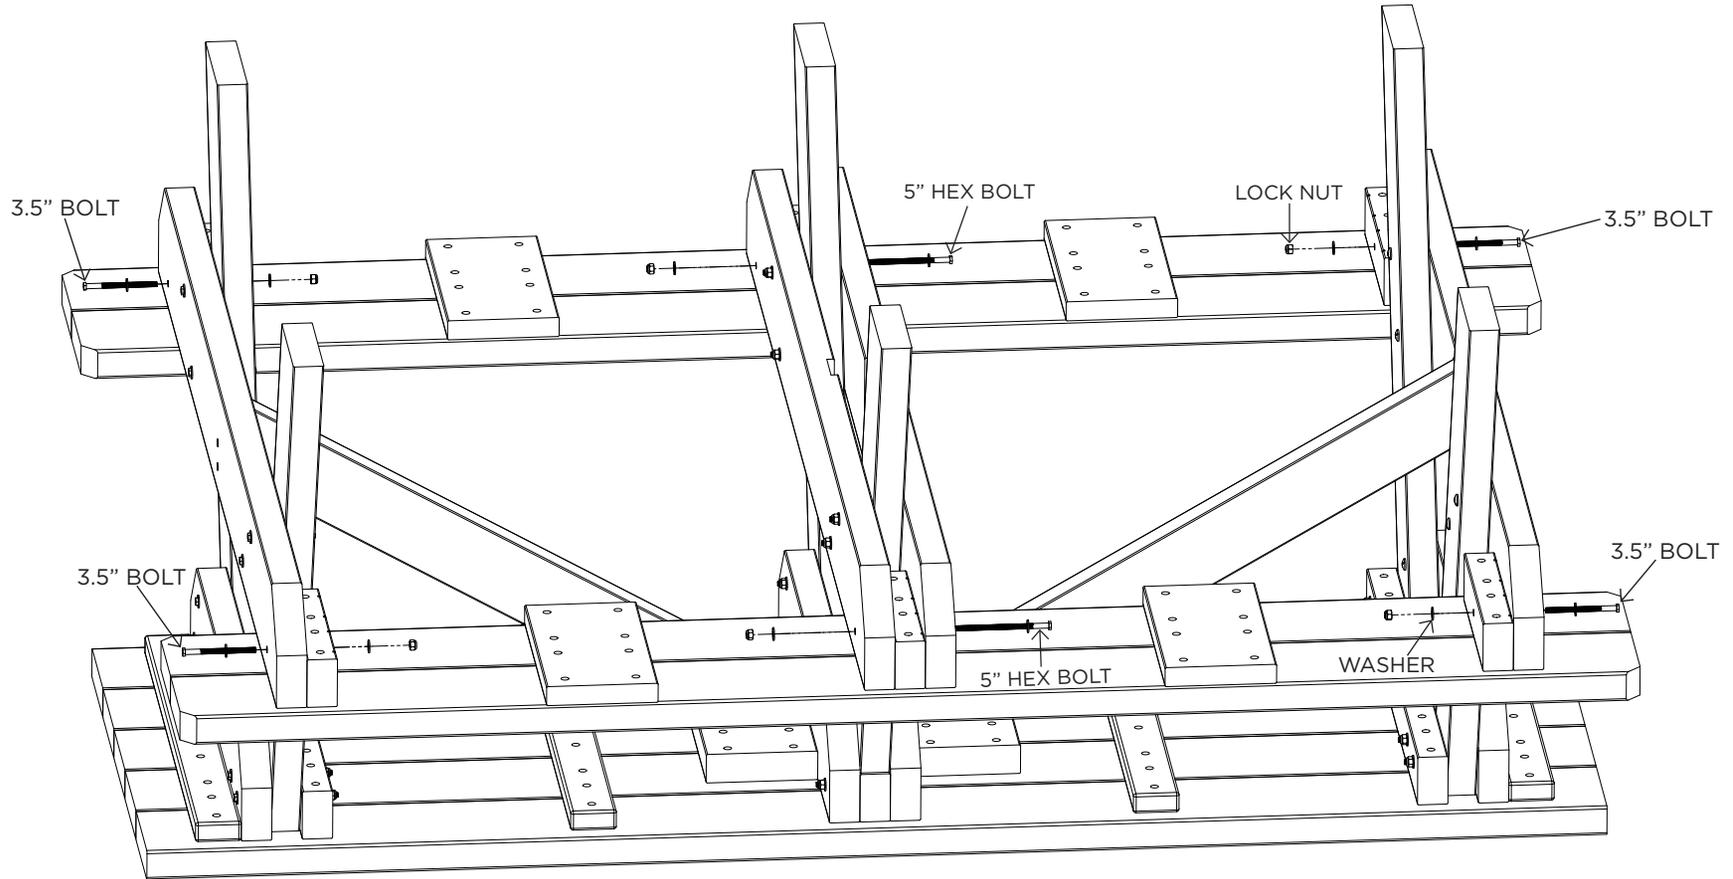

Congratulations on purchasing this Durawood 72" Picnic Table. QUESTIONS REGARDING THIS PRODUCT? Call our customer service team, 252-758-0641.

RESIDENTIAL WARRANTY - This quality product includes a LIMITED LIFETIME WARRANTY for RESIDENTIAL CUSTOMERS. In the unlikely event any splintering, rotting, cracking, peeling, or chipping should ever occur, The Hammock Source will supply replacement parts or replace the furniture, at no charge to you. This does not include negligence, improper use, animal damage or damage caused by natural disasters. When using around fire, keep furniture at a minimum distance of 30 inches from the heat source. Prevent prolonged exposure to chlorinated water. Note that an original sales receipt must accompany any returned product, along with a Return Authorization Number from Hammock Source customer service; call at 252-758-0641.

CONTRACTOR WARRANTY - CONTRACTORS receive a LIMITED 7-YEAR WARRANTY. Follow the same steps outlined above.

MAINTENANCE - Thoroughly inspect product before each use. Periodically check bolts after assembly and re-tighten when necessary.

